Please visit www.blueox.com for the latest version of these installation instructions.



### **BX2422**

### 2025 RAM 1500 Tungsten

(Includes Adaptive Cruise Control, Shutters, & Turbo) Installation Instructions

Please read BOTH these Installation Instructions and the General Information sheet prior to installing or operating this equipment.

Serial Number

- 1. Blue Ox® towing products and accessories are intended to be installed by Blue Ox® Dealers who are familiar with our products and have the equipment and knowledge necessary to do "fit work". If needed, Blue Ox® Dealers can be found at www.blueox.com or by contacting our Customer Care Department at (402) 385-3051.
- 2. Many Blue Ox® baseplates are designed to use existing holes and hardware to mount the baseplate to the towed vehicle. Even though bolts are there, do not assume they are adequate for baseplate mounting. Always use the hardware supplied in the hardware kit and existing hardware as specified in the installation instructions.



If the front of your vehicle looks different than this, please contact us at (402)385-3051.

Reference your vehicle owner's manual for manufacturer's towing specifications.

Attachment Tab Height: 19"

Attachment Tab Width: 38"

Please ensure tow bar being used is compatible with the baseplate tab width.

### **Bolt Torque Specifications** Torque in Foot-Pounds for Inch Bolts

<b>Bolt Size</b>	Grade 5	Grade 8	
1/4"	10	14	
5/16"	19	29	
3/8"	33	47	
7/16"	54	78	
1/2"	78	119	
5/8"	154	230	
3/4"	257	380	

### **Bolt Torque Specifications**

Torque in Foot-Pounds for Metric Bolts

<b>Bolt Size</b>	Grade 8.8	Grade 10.9	
6MM	6	8	
8MM	16	22	
10MM	31	40	
12MM	54	70	
14MM	89	117	
16MM	161	230	
18MM	222	318	

Failure to read and follow these instructions could result in separation of the towed vehicle from the tow bar, causing property damage, loss of towed vehicle, personal injury or death.

### 2025 RAM 1500 Tungsten (Includes Adaptive Cruise Control, Shutters, & Turbo) Installation Instructions

**Instruction Notes:** The fascia and bumper are removed and reinstalled for the baseplate installation. Some drilling and trimming is required.

Place all components that are removed on a flat, sturdy surface. All items will be reinstalled unless otherwise noted after the baseplate is installed.

The dimensional variations between otherwise identical vehicles can be considerable. While the baseplate was designed for easy installation, it may be necessary to tailor the baseplate slightly to compensate for vehicle manufacturer's tolerances.


The BX88442 Tail Light Wiring Kit is recommended for this vehicle.

### **NOTICE**

- Handling of some cosmetic parts when installing this product may require the use of protective covers, rags, specialty tools, etc. to prevent damage.
- When using power drills be aware of the dangers of torque and drill bit length.
- When using a reciprocating saw be aware of objects behind the cutting surface.
- Use a good quality paint to spray cut edges of frame to prevent rusting.
- Be sure that ALL electrical connections are plugged in and accessories are functioning properly before reinstalling the fascia.
- The baseplate is computer tested to your vehicle's GVWR, exceeding this weight will void the manufacturer's warranty.
- Be sure to use a sufficient amount of Loctite® Red on all bolt threads before tightening. Tighten all bolts according to the torque chart provided unless specified.
- Dealer or installer be certain the user receives these instruction sheets.
- If the baseplate is in an accident, it must be replaced. DO NOT use it again! An accident can
  cause unseen damage and using it again could result in more damage or serious injury. DO NOT
  use the baseplate if it is damaged or missing parts.

### 2025 RAM 1500 Tungsten

### (Includes Adaptive Cruise Control, Shutters, & Turbo) Installation Instructions

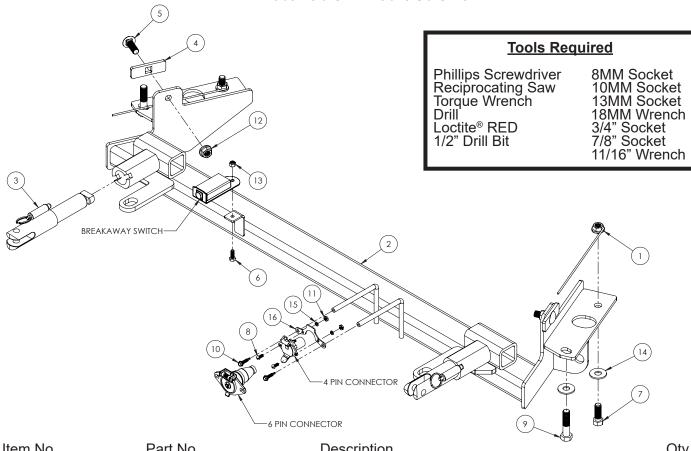

Item No.	Part No.	Description	Qty.
1	61-4029	1/2" Whiz Nut w/ 10" Wire	2
2	61-8752	BX2422 Baseplate	1
3	62-3469	Attachment Tab Assembly with Hole	2
4	101-10556	1/4" x 1" x 3" Plate, 1/2" Carriage Bolt Square Ho	ole2
5	201-0012	1/2"-13 x 1-1/2" Carriage Bolt, Grade 5, ZP	2
6	201-0050	1/4"-20 x 3/4" Hex Head Bolt, Grade 5, ZP	1
7	201-0051	1/2"-13 x 1-1/2" Hex Head Bolt, Grade 5	2
8	201-0192	#10-32 1/2" Round Slotted Head Screw	2
9	201-0813	14MM-2MM x 50MM Hex Head Bolt, Grade 10.9	, Blck2
10	201-0979	#12-14 x 1" Self Drilling Screw, ZP	2
11	202-0047	#10-32 Hex Nut	2
12	202-0072	1/2"-13 Hex Flange Whiz Lock Nut, ZP	2
13	202-0102	1/4"-20 Hex Nylon Nut, ZP	1
14	203-0005	1/2" Flat Washer	4
15	203-0054	#10 Lock Washer, ZP	2
16	299-0685	Electrical Bracket	1
17	226-0049(not shown).	Class IV Safety Cables	2
18	,	1/2" Quicklink, ZP	
19	290-0437(not shown).	Black Cap Plug Receiver	2
	·		

#### **Important:**

Use only genuine factory replacement parts on your baseplate. Do **NOT** substitute homemade or non-typical parts. If a bolt is lost or in need of replacement, for your safety and the preservation of your baseplate, be sure to use a replacement bolt of the same grade (In most cases it will be Grade 5, please reference the parts list above). Replacement parts may be ordered through your nearest Blue Ox® Dealer or Distributor. Failing to follow and/ or altering these installation instructions in either installation or required equipment will void the manufacturer's warranty. Towing behind a non-motorized vehicle will void the warranty.



 Using an 8MM socket, remove the eleven (11) bolts from the wheel well trim. Do this on both sides of the vehicle.



 Pull trim outward to release from clips and remove. Set trim aside to be reinstalled later. Remove clips and attach them to trim for easier reinstallation. Do this on both sides of the vehicle.







3. Using an 8MM socket, remove the five (5) bolts (white) and four (4) push pins (gray) from the wheel well liner. Remove liner and set aside to be reinstalled later. Do this on both sides of the vehicle.



4. Using a 10MM socket, remove the one (1) bolt from the fascia joint. Do this on both sides of the vehicle.



5. Using a 10MM socket, remove the five (5) bolts from the bottom of the fascia.



6. Unplug the electrical from the automatic valence on the driver side of the vehicle.





7. Using a 13MM socket, remover the four (4) nuts, two (2) on each side. Remove valence and set aside to be reinstalled later.

### 2025 RAM 1500 Tungsten

(Includes Adaptive Cruise Control, Shutters, & Turbo)

Installation Instructions





Using a 13MM socket, remove the two

 nuts from the plastic piece behind the bumper. Do this on both sides of the vehicle.





 Using a 10MM socket, remove the two
 bolts from the plastic piece behind the bumper. Remove the electrical clip from each end of the plastic piece (inset). Remove piece and set aside to be reinstalled later.






10. Unplug the three (3) electrical connections, one (1) on the driver side and two (2) on the passenger side, from behind the bumper.




11. Start to remove the fascia at the fascia joint. To release the fascia, push up on the fascia and down on the black piece behind. Do this on both sides of the vehicle. Remove fascia and set aside to be reinstalled later.



12. Using an 18MM socket, remove the three (3) nuts from the back of the bumper. Do this on both sides of the vehicle. Slide bumper and lower shutter piece off the vehicle and set aside to be reinstalled later.

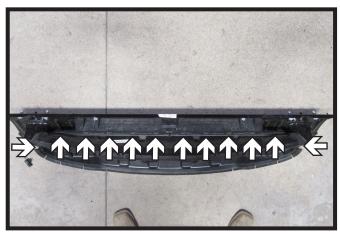


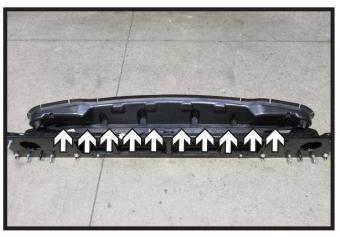


13. Remove the shutter housing from the shutters by unclipping the ten (10) clips on the top, ten (10) on the bottom and one (1) on each side. Remove shutter housing and set aside to be reinstalled later.




14. Mark the center point on the back of the bumper. Measure 16-3/4" in each direction and mark. Then measure 4-1/2" and mark again.

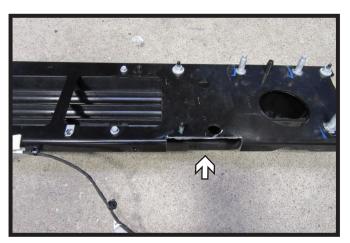

15. Using a reciprocating saw remove the marked area as shown. Be careful not to cut the wire loom attached to the bumper. Do this on both sides of the bumper.

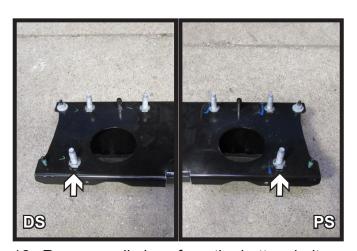

16. Remove coil piece from the bottom bolt on each side. Remove the two (2) bolts from the bumper.

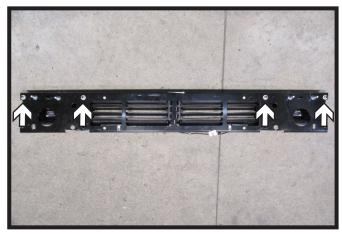

17. Using a 10MM socket, remove the four (4) bolts attaching the shutters to the bumper frame. Remove shutters and set aside to be reinstalled later.

### BX2422 2025 RAM 1500 Tungsten

### (Includes Adaptive Cruise Control, Shutters, & Turbo) Installation Instructions



18. Slide the baseplate onto the vehicle. Start the bottom front 14MM bolt with flat washer and nylon lock nut. Hand tighten. Do this on both sides of the vehicle.



19. Ensure the baseplate is as far back as possible. Using a 1/2" drill bit, drill out the side hole using the baseplate as a template. Do this on both sides of the vehicle.



20. Start the one (1) 1/2" carriage bolt with plate and whiz lock nut in side hole of the baseplate. Tighten bottom bolt then side bolt. Do this on both sides of the vehicle.


\*\* Use Loctite® Red on all bolt threads and tighten all bolts to the appropriate torque. \*\*



21. Using a 1/2" drill bit, drill out the back bottom hole using the baseplate as a template. Do this on both sides of the vehicle.



22. Install one (1) 1/2" bolt with flat washer and whiz nut in the back bottom hole of the baseplate. Tighten. Do this on both sides of the vehicle.

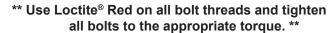



23. Reinstall the bumper piece onto the vehicle.



24. Using a reciprocating saw remove the indicated area of the shutter housing to allow clearance for the baseplate and convenience links.

Measure 2-3/4" down on the outside of the outer rib. Then measure 5" towards the center of the housing. Finally measure 2-3/4" up from the 5" line to the center opening. Remove area. Do this on both sides of the shutter housing.



25. Reattach the shutter housing to the shutters and reinstall the lower shutters onto the bumper frame.

### 2025 RAM 1500 Tungsten

### (Includes Adaptive Cruise Control, Shutters, & Turbo) Installation Instructions



26. Attach the permanent baseplate safety cables to the provided convenience link on the baseplate. The photo above shows the recommended installation of the cables to frame of vehicle. Additional options may interfere with suggested mounting; in this case, secure the cables to a solid piece of the frame as described in the General Information sheet. Be sure the safety cables do not rub against any hoses or moving parts. Do this on **BOTH** sides of the vehicle.





27. Using a reciprocating saw, trim the plastic piece from behind the bumper as shown. Do this on both sides of the piece. Reinstall plastic piece.



28. Hold the fascia as close to its original position, mark and trim the fascia around the convenience links and attachment tabs. Example shown above.



29. Reinstall the fascia, wheel well liner, and wheel well trim. Reconnect all electrical connections.

#### **CUSTOMER SERVICE COMMITMENT**

Blue Ox® is committed to providing you with exceptional customer care throughout your lifetime with our products. Our team is here to assist you with any questions you may have regarding the performance of your product. Simply call (402) 385-3051 and you can speak with our customer service team.

Additionally, please visit our website to see which rallies our team will be attending. For a nominal fee, our service technician will service your towing system to ensure it's in proper working condition. Also, as a commitment to our customers, should you visit our factory, you can stay at our full service Blue Ox® campground at no charge along with enjoying a factory tour.

Again, thank you for being our customer and for the confidence you have shown in the performance of our products. It is because of customers like you we enjoy the success we have today.



© 2023 Blue Ox One Mill Road, Industrial Park Pender, Nebraska 68047 Phone: (402) 385-3051 Fax: (402) 385-3360 www.blueox.com

### **General Information**

- 1. Ensure that your product(s) are registered online at www.blueox.com. It is crucial to register your product(s) so that you may be alerted of product offerings, updates, upgrades, maintenance and safety bulletins, and/ or recalls.
- 2. It is the owner's responsibility to inspect all towing equipment for cracked welds, missing or worn parts and loose bolts before each towing trip. Be sure to use Loctite® Red on all bolts and tighten to the recommended specifications.
- 3. It is the owner's responsibility to hook up all towing equipment per manufacturer's instructions/recommendations.
- 4. Remove the attachment tabs when not in use (if applicable).

### **Notice To Baseplate Installer**

- 1. It is YOUR responsibility to watch for:
  - Oil cooler and air conditioner lines
  - · Electrical wires and hoses
  - Missing parts or attaching points on the frame
  - \*\* If the baseplate is improperly installed and is against a wire or hose, it could cause fluid leaks or electrical shorts some time after the actual baseplate installation.


#### **Permanent Baseplate Safety Cable Installation**

Permanent baseplate safety cables are strongly recommended when towing a vehicle with a tow bar. The principle function of the permanent baseplate safety cables is to prevent the towed vehicle from breaking loose in the event the connection between the frame of the towed vehicle and the baseplate fails or becomes disconnected. The cables must be connected from the baseplate to the frame rail or cross member of the vehicle's frame. The illustrations below show the possible arrangements recommended by Blue Ox<sup>®</sup>. Each permanent baseplate safety cable must have an adequate weight rating for the towing system. The weight rating of the two (2) cables together will not qualify.

Do not mount the permanent baseplate safety cables against wires, hoses or brake lines.


These permanent baseplate safety cables should remain installed as long as the baseplate is installed on the vehicle. Permanent baseplate safety cables are to be used in conjunction with, and NOT a replacement for legally required safety cables attaching the towed vehicle to the towing vehicle.



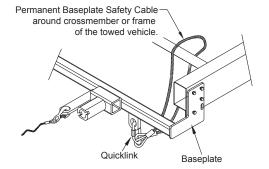

### Option #2

(Baseplates with out Convenience Link Tabs)

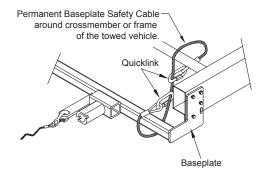

### BLUE OX ORIGINAL PURCHASERS THREE YEAR LIMITED WARRANTY

Automatic Equipment Manufacturing Company ("Automatic") warrants to the original (first) retail purchaser that this product, manufactured by Automatic, shall be free from defect in material and workmanship under normal use and service for a period of three years from the date of delivery.

During said three-year period, Automatic will repair or replace any parts that have been returned by the original purchaser, to the factory, transportation prepaid, and in Automatic's sole and absolute opinion found to be defective.

Limitations on Warranty Coverage:

Coverage under this warranty will be valid only if the customer warranty card is returned by the original purchaser within 30 days of purchase.

Coverage under this warranty will be effective only when a copy of the original invoice, showing date and place of purchase, accompanies any claim for warranty. This warranty is NON TRANSFERABLE.

This limited warranty will not cover, in any way or form, any alleged damages caused by incorrect or improper installation, improper use, modification or neglect of product, failure to properly service and maintain, misuse, act of God, accident or failure of the user to follow guidelines contained in the instructional material provided by Automatic.

This warranty does not cover normal wear and tear, paint or rust.

Warrantor assumes no responsibility to the owner for loss of use of product, loss of time, inconvenience or any other damage consequential or otherwise. Including, but not limited to mileage, expense of transporting of product, return shipping expense, mechanics travel time, telephone, road service, towing, and rental during repairs, travel, lodging, loss or damage to personal property or loss of earnings.

REPAIR OR REPLACEMENT AS SET FORTH IN THIS LIMITED WARRANTY IS THE SOLE EXCLUSIVE REMEDY OF THE PURCHASER. AUTOMATIC SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN LENGTH TO THE DURATION OF THIS WARRANTY.

Please visit <a href="http://blueox.com/warranty/">http://blueox.com/warranty/</a> to register your warranty

